

Instruction Manual

Outdoor Wireless Speaker

 
Function

- **Connection Distance**
Maximum receiving distance is 10 meters.
- **Water Resistance Dustproof & Shockproof**
IPX4 water resistance, highly durable rugged with rubberized covering and a strong metal mesh.
- **Aux-In**
Stereo audio input interface enables easy connection with a variety of audio devices.
- **Breakpoint Memory**
Automatically remembers the song and volume setting of the last usage.
- **Built-in Battery & Power bank**
The built-in rechargeable lithium battery is practical and good for the environment.
- **Hands-free Call**
the voice is clear and has no echo.

★ **3D Surround Sound**
Pair 2 speakers for 2.1 L/R channel surround sound.

Analysis

Button&Interface

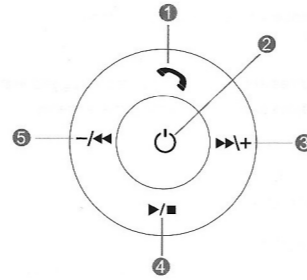

- 1 Answer: short press
Hang up: long press
Lately call: double short press
- 2 ON/OFF Power, Bluetooth Pairing
- 3 Increase Volume: long press
Next Track: short press
- 4 Play/Pause
- 5 Decrease Volume: long press
Previous Track: short press

Connection

 
1 Wireless connection

- 1 Long press the Power button and the status indicator lights up.
- 2 Long press the Play/Pause button and the red/blue indicator light flashes. The speaker is now in connection state.
- 3 Open Bluetooth settings on the audio device, select speaker's model and connect automatically.
- 4 Now, enjoy your music!

- ▲ The sound speaker has an automatic memory function. It can be switched on to automatically connected after the first Bluetooth connection has been established.
- ▲ Long press Play/Pause button can cancel the Bluetooth connection.

2 Pair 2 speakers

- 1 Long press the Power button of two speakers to turn them on.
- 2 Long press VOL- button of speaker 1 and long press VOL+ button of the other speaker 2 simultaneously about 2 seconds, after a high-pitched audio signal the two speakers start to pair.
- 3 After 5 to 8 seconds, the red/blue indicator light starts flashing, another high-pitched audio signal sounds, when the indicator light turns blue the pairing was successful.
- 4 To choose a host speaker, long press the Play/Pause button, the red/blue indicator light starts flashing, and the speaker enters into connection state with an audio device.



5

1

2

 
3

4



- 5 Open Bluetooth settings on the audio device, select speaker's model and connect automatically.

- 6 Enjoy your music with 2.1 L/R channel surround sound, the host speaker represents the L channel and the slave speaker the R channel.



- ▲ Cancel pairing through host speaker by long press Phone button of the host speaker, it will cancel the connection with slave speaker and the audio device.

- Cancel pairing through slave speaker by long press Phone button of the slave speaker, which only cancels the connection of the slave speaker with the host speaker.


3 Power Bank connection



This speaker is powered by a rechargeable lithium battery. There are protections in place to guard against over-charging and over-discharging. For proper care, fully charge the speaker to 100% capacity before unplugging and using it. Proper care of the battery will result in a longer battery life.

4 Charging connection:

We recommend fully charging your speaker before commencing use. To charge the speaker using the supplied cable please connect the micro USB plug to the port that is located on the top of the speaker. The USB plug at the other end of the cable should be plugged into the USB port on your computer or appropriate charge. The battery level indicator will blink to indicate that the speaker is charging.

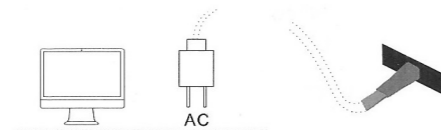

7

Environmental

Name and Content of Toxic or Hazardous Substances and Elements
According to Management Methods for Controlling Pollution by Electronic Information products

Toxic or Hazardous Substances and Elements						
Part Name	(Pb)	(Hg)	(Cd)	(Cr6+)	(PBB)	(PBDE)
Cable	×	○	○	○	○	○
PWAs	×	○	○	○	○	○
Plastic parts	○	○	○	○	○	○
Wood parts	○	○	○	○	○	○
Metallic elements	×	○	○	×	○	○

○: Indicates that this toxic or hazardous substance contained in all the homogeneous materials for this part is below the limit requirement in SJ/T 11363-2006.
×: Indicates that this toxic or hazardous substance contained in all the homogeneous materials for this part is above the limit requirement in SJ/T 11363-2006.

FC X CE RoHS

8

Troubleshooting

- **Speaker is not working:**
 - 1.If the light on the front of the speaker is not illuminated when attempting to switch on the speaker, the battery may be empty. Please connect the speaker to a PC or USB charger.
 - 2.The speaker shut down or has entered standby mode. Please press the power button until the indicator light turns on.
 - 3.The connection may have been lost due to the distance between the speaker and mobile/tablet, obstructions or low battery.
- **The speaker fails to connect via Bluetooth:**
 - 1.Check if Bluetooth is activated on your audio device and the speaker is paired.
 - 2.If you are unable to connect via Bluetooth with your Windows based tablet, PC or laptop it may be because your drivers need updating.
 - 3.Check if you entered the correct PIN number: 0000
 - 4.When searching for the speaker please ensure that your audio device is set to "Discoverable".
- **Fail to play music:**
 - 1.Bluetooth connection disruption can occur if devices have been paired for a period of time, or if you have numerous Bluetooth devices saved in your memory or due to a glitch. Please unpair the speaker and your device and make a new "paring".
 - 2.Check whether the music is paused.
 - 3.Check the volume level on the device and the speaker.
 - 4.Is the speaker connected to another device via AUX?
 - 5.Is the battery running low?
- **Music is suspended:**
Check whether the speaker is running out of power.

9

Warranty Support

This warranty just covers the speaker for its normal, intended use as specified in the User Manual and does not cover problems or damages that have resulted from the following:

1. Improper or unreasonable usage, maintenance or connection to an improper voltage supply or power surges.
2. Accidents or damages caused by excess moisture.
3. Improper packing.
4. Accident, abuse, misapplication, or any unauthorized repair, modification or disassembly.

Thank you very much for choosing us! For anything else please feel free to contact us on the Amazon website of our Aftersaleservice, or email to us via Gaoke2008@foxmail.com.

10

6